


Below you can see the layout of the controllable sections for the NEO:

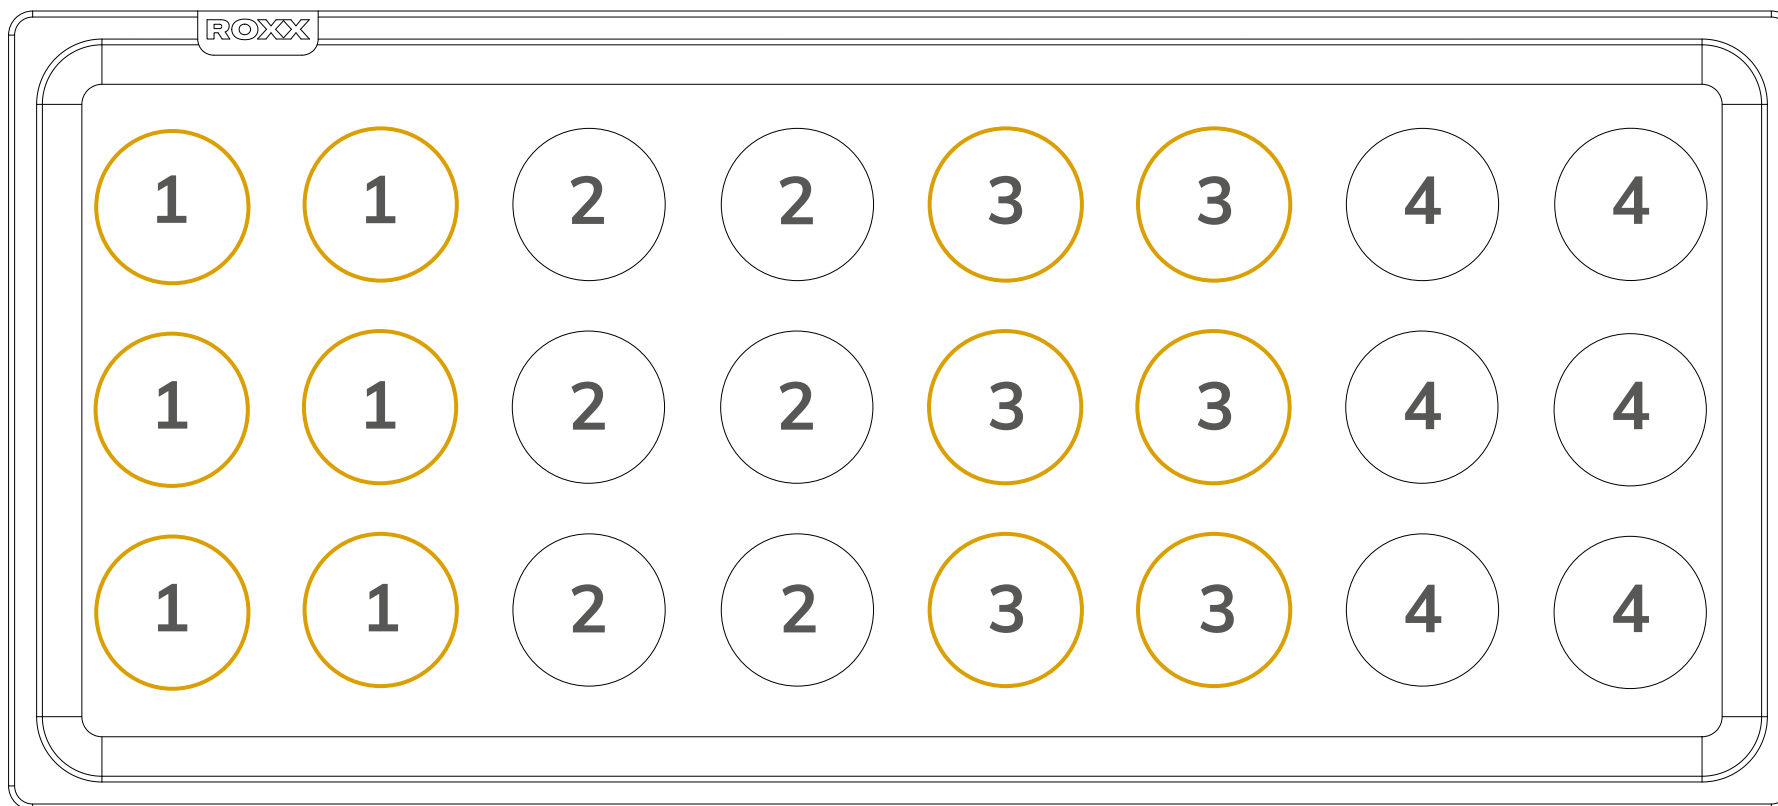

Below you can see the layout of the controllable sections for the NEO, when „Invert“ is activated in settings:

