


Below you can see the layout of the controllable sections for the NEOi:

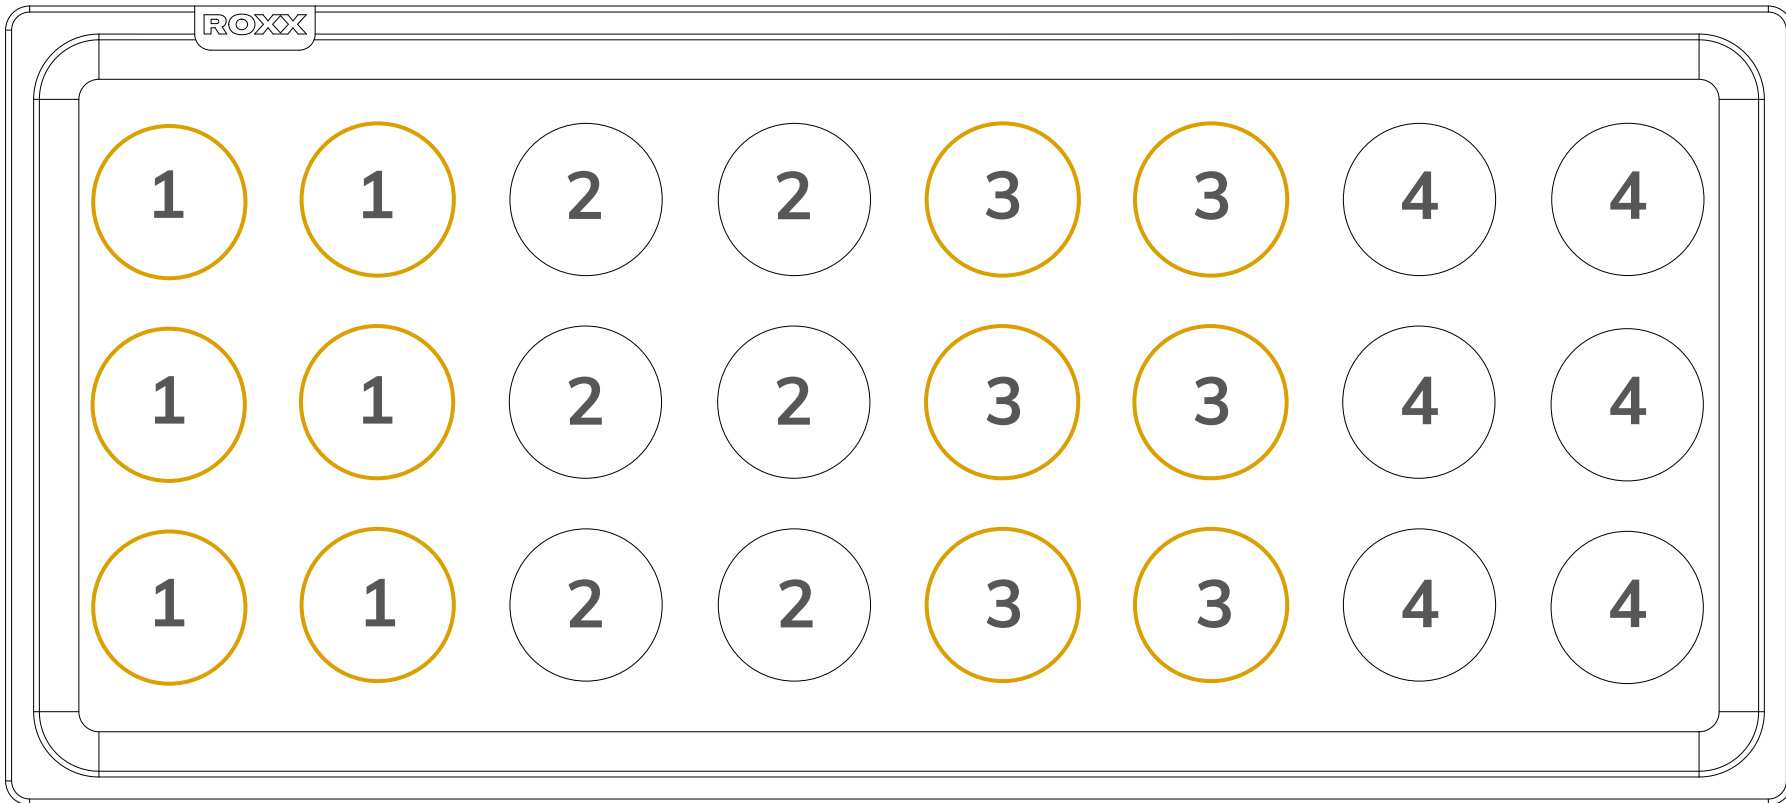

Below you can see the layout of the controllable sections for the NEOi, when „Invert“ is activated in settings:

